

## 惠普

品牌	打印机型号	接口类型
HP 打印机	Color Inkjet cp1700	并口/USB (PCL3)
	Color Inkjet cp1700d	并口/USB (PCL3)
	Color Laserjet CP1210	USB2.0(GDI)
	Color Laserjet CP1510	USB2.0(PCL6)
	Color Laserjet CP2020	USB2.0(PCL6)
	Color Laserjet CP2025	USB2.0(PCL6)
	Color Laserjet CP3525	USB/EIO (PCL6/5E)
	Color Laserjet 5550	USB/并口/3EIO (PCL6/5E)
	Color Laserjet 2500	并口/USB (PCL5E)
	Color Laserjet 2500L	并口/USB (PCL5E)
	Color LaserJet 2700	USB2.0(PCL6)
	Color LaserJet 3000	USB/EIO (PCL6/5E)
	Color LaserJet 3050	USB/EIO (PCL6/6E)
	Color LaserJet 3700	并口/USB (PCL6/5e)
	Color Laserjet 4650 全系列	并口/USB (PCL5E)
	Color Laserjet CM1015/1017	USB2.0(PCL6)
	Color Laserjet CM1312	USB2.0(PCL6)
	Laserjet P1007	USB2.0(GDI)
	Laserjet P1008	USB2.0(GDI)
	Laserjet P1505	USB2.0(GDI)
	Laserjet P2010	USB2.0(GDI)
	Laserjet 1015	并口/USB (PCL5E)
	Laserjet 1150	并口/USB (PCL5E)
	Laserjet 1200	并口/USB (PCL5E)
	Laserjet 1300	并口/USB (PCL5E)
	Laserjet 1320	并口/USB (PCL5E)
	LaserJet P2014	并口/USB2.0 (GDI)
	LaserJet P2015/2015D	USB (PCL5E)
	LaserJet P2030	USB(GDI)
	LaserJet P2050	USB2.0(PCL)
	LaserJet P2055	USB2.0(PCL)
	LaserJet P2035	USB/并口(GDI)
	Laserjet 2200	USB/并口(PCL6/5E)
Laserjet 2200D	USB/并口(PCL6/5E)	
Laserjet 2300	USB/并口(PCL6/5E)	
Laserjet 2300D	USB/并口(PCL6/5E)	

<b>LaserJet 2420</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet P3005</b>	<b>USB/并口/EIO (PCL6/5E)</b>
<b>LaserJet M1005 一体机</b>	<b>USB2.0(GDI)</b>
<b>LaserJet M1120 一体机</b>	<b>USB2.0(GDI)</b>
<b>LaserJet M1319 一体机</b>	<b>USB2.0(GDI)</b>
<b>Deskjet F700 一体机</b>	<b>USB2.0</b>
<b>Deskjet F2200 一体机</b>	<b>USB2.0</b>
<b>HP Photosmart C4340 一体机</b>	<b>USB2.0</b>
<b>HP Photosmart C4380 一体机</b>	<b>USB2.0</b>
<b>HP Photosmart C4400 一体机</b>	<b>USB2.0</b>
<b>HP Photosmart C5300 一体机</b>	<b>USB2.0</b>
<b>Officejet 4350</b>	<b>USB2.0</b>
<b>Officejet 5600</b>	<b>USB2.0</b>
<b>Officejet 6300</b>	<b>USB2.0</b>
<b>Officejet J3500</b>	<b>USB2.0</b>
<b>Officejet J3600</b>	<b>USB2.0</b>
<b>Officejet J5500</b>	<b>USB2.0</b>
<b>Officejet J6400</b>	<b>USB2.0</b>
<b>Officejet J7300</b>	<b>USB2.0</b>
<b>Officejet J7500</b>	<b>USB2.0</b>
<b>Officejet J4500/4600</b>	<b>USB2.0</b>
<b>LaserJet 3015</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet 3020</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet 3030</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet 3052</b>	<b>USB(PCL6/5E)</b>
<b>LaserJet 3055</b>	<b>USB(PCL6/5E)</b>
<b>LaserJet 3100</b>	<b>USB/并口(PCL6/5E)</b>
<b>Laserjet 3200</b>	<b>USB/并口(PCL6/5E)</b>
<b>Laserjet 3300</b>	<b>USB/并口(PCL6/5E)</b>
<b>Laserjet 3300mfp</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet 3330mfp</b>	<b>USB/并口(PCL6/5E)</b>
<b>LaserJet 3380</b>	<b>USB/并口 (PCL6/5E)</b>
<b>Laserjet 4000</b>	<b>USB/并口 (PCL6/5E)</b>
<b>LaserJet 4050</b>	<b>USB/并口 (PCL6/5E)</b>
<b>LaserJet P4014</b>	<b>USB/并口/EIO (PCL6/5E)</b>
<b>Laserjet 4100mfp</b>	<b>USB/并口 (PCL6/5E)</b>
<b>Laserjet 4200 系列</b>	<b>USB/并口 (PCL6/5E)</b>
<b>LaserJet 4250</b>	<b>USB/并口 (PCL6/5E)</b>
<b>Laserjet 4350</b>	<b>USB/并口 (PCL6/5E)</b>
<b>LaserJet 4L/4P/4V</b>	<b>USB/并口 (PCL6/5E)</b>
<b>Laserjet 5000</b>	<b>USB/并口 (PCL6/5E)</b>

	<b>LaserJet 5000LE</b>	<b>USB/并口 (PCL6/5E)</b>
	<b>Laserjet 5100fn/tn</b>	<b>USB/并口 (PCL6/5E)</b>
	<b>Laserjet 5100le/se</b>	<b>USB/并口 (PCL6/5E)</b>
	<b>LaserJet 5200</b>	<b>USB/并口/EIO (PCL6/5E)</b>
	<b>LaserJet 5200L/Lx</b>	<b>USB/并口/EIO (PCL6/5E)</b>
备注：HP 所有喷墨打印机只要带并口都可以用 <b>SX-110</b> 使其实现网络共享打印。		

## 爱普生

爱普生 EPSON	<b>AcuLaser C1000</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C1100</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C1900</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C2000</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C4000</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C4100</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C7000</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C8600</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser C900</b>	<b>USB/并口(ESC/P2)</b>
	<b>AcuLaser CX11</b>	<b>USB2.0</b>
	<b>EPL-2180</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 1220</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 2020</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL2500</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5200</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5500</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5700L</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5800L</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5800</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5900L</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 5900</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 6100L</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 6100</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 6200L</b>	<b>USB/并口(ESC/P2)</b>
	<b>EPL 6200</b>	<b>USB/并口(ESC/P2)</b>
	<b>Epson Stylus PRO 4800</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 4400</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 7400</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 9400</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 7800</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 9800</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson Stylus PRO 4000</b>	<b>USB2.0+并口+TYPE B 接口</b>
<b>Epson Stylus PRO 7600</b>	<b>USB2.0+并口+TYPE B 接口</b>	

	<b>Epson Stylus PRO 9600</b>	<b>USB2.0+并口+TYPE B 接口</b>
	<b>Epson ME Office 600F</b>	<b>USB2.0</b>
	<b>Epson Stylus CX9300F</b>	<b>USB2.0</b>
	<b>Epson Stylus Photo RX690</b>	<b>USB2.0</b>
	<b>Epson Stylus CX5500</b>	<b>USB2.0</b>
	<b>Epson Stylus CX8300</b>	<b>USB2.0</b>
	<b>Epson Stylus CX11</b>	<b>USB2.0</b>
	<b>Epson Stylus CX6900F</b>	<b>USB2.0</b>
	<b>Epson Stylus CX5900</b>	<b>USB2.0</b>

### 三星

三星	<b>CLP-300</b>	<b>USB2.0(SPL)</b>
	<b>CLP-315</b>	<b>USB2.0(SPL)</b>
	<b>CLP-500</b>	<b>USB2.0(SPL)</b>
	<b>CLP-600</b>	<b>USB2.0(SPL)</b>
	<b>MFP-560</b>	<b>USB</b>
	<b>MJC-5000</b>	<b>USB(PCL3)</b>
	<b>MJC-6000</b>	<b>USB(PCL3)</b>
	<b>ML-2245</b>	<b>USB2.0(SPL)</b>
	<b>ML-1641</b>	<b>USB2.0(SPL)</b>
	<b>ML-2241</b>	<b>USB2.0(GDI)</b>
	<b>ML-1630</b>	<b>USB2.0(SPL)</b>
	<b>ML-2850D</b>	<b>USB2.0(PCL6)</b>
	<b>ML-3470D</b>	<b>USB2.0+并口 (PCL6)</b>
	<b>ML-2010</b>	<b>USB2.0(SPL)</b>
	<b>ML-1610</b>	<b>USB2.0(SPL)</b>
	<b>ML-1210</b>	<b>IEEE1284, USB 2.0</b>
	<b>ML-1250</b>	<b>并口/USB(PCL6)</b>
	<b>ML-1430</b>	<b>并口/USB(SPL)</b>
	<b>ML-1440/1450</b>	<b>并口/USB(SPL)</b>
	<b>ML-1510/1710</b>	<b>并口/USB(SPL)</b>
	<b>ML-1750</b>	<b>并口/USB(PCL6)</b>
	<b>ML-2150</b>	<b>并口/USB(PCL6)</b>
	<b>ML-2152W</b>	<b>并口/USB(PCL6)</b>
	<b>ML-2510</b>	<b>并口/USB(SPL)</b>
	<b>ML-2570</b>	<b>并口/USB(PCL6)</b>
	<b>ML-4600</b>	<b>并口/USB(PCL6)</b>
	<b>ML-5000A/5100A/P/5200A</b>	<b>并口/USB(PCL6)</b>
	<b>ML-6060/N/6050/6100</b>	<b>USB</b>

	<b>ML-6160N/6160S</b>	并口+USB
	<b>ML-7050/N/7300/N</b>	并口+USB
	<b>ML-808</b>	并口/USB(SPL)
	<b>ML-912</b>	并口/USB(PCL6)
	<b>SCX-1100</b>	USB/并口
	<b>SCX-1150F</b>	USB/并口
	<b>SCX-1220</b>	USB(LIDIL)
	<b>SCX-1220R</b>	USB
	<b>SCX-1300</b>	USB(PCL3)
	<b>SCX-1350F</b>	USB(PCL3)
	<b>SCX-4100/4106/4116/4216F</b>	并口/USB(SPL)
	<b>SCX-4521F</b>	并口/USB(SPL)
	<b>SCX-4200</b>	USB2.0(SPL)
	<b>SCX-4300</b>	USB2.0(SPL)
	<b>SCX-4500</b>	USB2.0(SPL)
	<b>SCX-4321</b>	并口/USB(SPL)
	<b>SCX-4725F</b>	USB2.0
	<b>SCX-5112</b>	USB/并口
	<b>SCX-5115</b>	并口/USB(PCL6)
	<b>SCX-5315F/5312F</b>	并口/USB(PCL6)
	<b>SF-330</b>	USB
	<b>SF-331P</b>	USB
	<b>SF-430</b>	USB/并口
	<b>SF-4500/4500C</b>	USB(GDI)
	<b>SF-565P/PR</b>	USB(SPL)
	<b>SF-565 PRC</b>	USB(GDI)
	<b>CLX-2160</b>	USB(SPL)
	<b>CLX-3175</b>	USB(SPL)

## 富士施乐

富士施乐	<b>Document Centre 156/186</b>	USB+并口 (PCL)
	<b>Document Centre 235/236</b>	USB+并口 (PCL)
	<b>DocuPrint 202</b>	USB+并口 (GDI)
	<b>DocuPrint 205</b>	USB+并口 (PCL)
	<b>DocuPrint 255</b>	USB+并口 (PCL)
	<b>DocuPrint 305</b>	USB+并口 (PCL)
	<b>DocuPrint 5550</b>	USB2.0(PCL5E,PCL6)
	<b>DocuPrint 203A</b>	USB+并口 (GDI)
	<b>DocuPrint 2050</b>	USB+并口 (GDI)

	<b>DocuPrint C2090</b>	<b>USB2.0 (GDI)</b>
	<b>DocuPrint C1110B</b>	<b>USB2.0 (PCL)</b>
	<b>DocuPrint C2100</b>	<b>USB2.0 (PCL)</b>
	<b>DocuPrint C2200</b>	<b>USB2.0 (PCL)</b>
	<b>DocuPrint C2255</b>	<b>USB2.0 (PCL)</b>
	<b>Phaser 3117</b>	<b>USB2.0 (GDI)</b>
	<b>Phaser 3124</b>	<b>USB+并口 (GDI)</b>
	<b>Phaser 3125</b>	<b>USB2.0 (GDI)</b>
	<b>Phaser 3200MFP</b>	<b>USB2.0(PCL5E,PCL6)</b>
	<b>Phaser 3428D</b>	<b>USB+并口 (GDI)</b>
	<b>Phaser 3435D</b>	<b>USB+并口 (GDI)</b>
	<b>Phaser 4510DT/DX</b>	<b>USB+并口 (PCL)</b>
	<b>Phaser 5500</b>	<b>USB+并口 (PCL)</b>
	<b>WorkCentre 3119</b>	<b>USB2.0 (GDI)</b>
	<b>WorkCentre 3117</b>	<b>USB2.0 (GDI)</b>
	<b>WorkCentre 4150</b>	<b>USB+并口 (PCL)</b>
	<b>WorkCentre 222</b>	<b>USB+并口 (GDI)</b>
	<b>WorkCentre PE220</b>	<b>USB2.0 (GDI)</b>

柯美

柯 美	<b>bizhub 162/210</b>	<b>USB(GDI)</b>
	<b>bizhub 7516/7521</b>	<b>USB(GDI)</b>
	<b>bizhub 200</b>	<b>USB(GDI)</b>
	<b>bizhub 211</b>	<b>USB(GDI)</b>
	<b>bizhub 220</b>	<b>USB(GDI)</b>
	<b>bizhub 163/163V</b>	<b>USB(GDI)</b>
	<b>bizhub 211</b>	<b>USB(GDI)</b>
	<b>bizhub 7616/7616V</b>	<b>USB(GDI)</b>
	<b>bizhub 7621</b>	<b>USB(GDI)</b>
	<b>bizhub 7622</b>	<b>USB(GDI)</b>
	<b>PagePro 1350W</b>	<b>IEEE1284/USB1.1 (GDI)</b>
	<b>PagePro 2500W</b>	<b>USB2.0 (GDI)</b>
	<b>PagePro 1380MF</b>	<b>USB2.0H (GDI)</b>
	<b>PagePro 1390MF</b>	<b>USB2.0H (GDI)</b>
	<b>PagePro 2480MF</b>	<b>USB2.0H (GDI)</b>
	<b>PagePro 9100</b>	<b>IEEE1284/USB1.1</b>
	<b>Lexmark E120</b>	<b>USB2.0(GDI)</b>
	<b>Lexmark X4270</b>	<b>USB2.0</b>
	<b>Lexmark X4550</b>	<b>USB2.0</b>

<b>Lexmark X5470</b>	<b>USB2.0</b>
<b>Lexmark X7350</b>	<b>USB2.0</b>
<b>Lexmark X8350</b>	<b>USB2.0</b>
<b>Lexmark E120</b>	<b>USB2.0</b>
<b>Lexmark E260D</b>	并口/USB
<b>Lexmark E360D</b>	并口/USB
<b>C510</b>	并口/USB
<b>C750</b>	并口/USB
<b>C752</b>	并口/USB
<b>C760</b>	并口/USB
<b>C762</b>	并口/USB
<b>C910</b>	并口/USB
<b>C912</b>	并口/USB
<b>2110 黑白激打</b>	<b>USB2.0</b>
<b>2210/2210P 彩色喷墨</b>	<b>USB2.0</b>
<b>2312 黑白激打</b>	<b>USB2.0</b>
<b>C8100</b>	<b>USB2.0(GDI)</b>
<b>C8000</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ1900</b>	<b>USB2.0(GDI)</b>
<b>LJ2200F</b>	<b>USB2.0(GDI)</b>
<b>LJ2250</b>	<b>USB2.0</b>
<b>LJ2200</b>	<b>USB2.0(GDI)</b>
<b>LJ2000</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ2110P</b>	<b>USB</b>
<b>LJ2500,2500W</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ2800,305D</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ3000W,3000</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ3500</b>	<b>USB2.0+并口(PCL6)</b>
<b>LJ4000N</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ5500</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ5600</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ5700</b>	<b>USB</b>
<b>LJ6000</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ6012MFP</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ6300</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ6300D</b>	<b>USB2.0+并口(GDI)</b>
<b>LJ7500,7500E</b>	<b>USB2.0+并口(GDI)</b>
<b>M930</b>	<b>USB2.0</b>
<b>M750</b>	<b>USB2.0</b>
<b>M7260</b>	<b>USB (PCL6)</b>
<b>M7250</b>	<b>USB2.0(GDI)</b>

	<b>M7215</b>	<b>USB2.0(GDI)</b>
	<b>M7205</b>	<b>USB2.0(GDI)</b>
	<b>M-3120</b>	<b>USB(GDI)</b>
	<b>M3200</b>	<b>USB2.0+并口(GDI)</b>
	<b>M6220</b>	<b>USB+并口 (PCL6)</b>
	<b>M7000</b>	<b>USB2.0+并口(GDI)</b>
	<b>M7110</b>	<b>USB2.0+并口(GDI)</b>
	<b>M7120 Pro</b>	<b>USB (PCL6)</b>
	<b>M7020 Pro</b>	<b>USB2.0+并口(GDI)</b>
	<b>M7025</b>	<b>USB2.0(GDI)</b>
	<b>M7125</b>	<b>USB2.1(GDI)</b>
	<b>M7030</b>	<b>USB2.0+并口(GDI)</b>
	<b>M3220</b>	<b>USB2.0+并口(GDI)</b>
	<b>M7200</b>	<b>USB2.0+并口(PCL5E)</b>
	<b>M7220D</b>	<b>USB2.0+并口(GDI)</b>
	<b>M8210</b>	<b>USB2.0+并口(GDI)</b>

## 方正

	<b>文绘 1200C</b>	<b>USB1.1</b>
	<b>文绘 2000C</b>	<b>USB2.0</b>
	<b>文杰 A6100N</b>	<b>IEEE1284/USB(PSII)</b>
	<b>文杰 A6100U</b>	<b>IEEE1284/USB(PSII)</b>
	<b>文杰 A6300</b>	<b>IEEE1284/USB(PSII)</b>
	<b>文杰 C8300N</b>	<b>USB1.1(GDI)</b>
<b>方正</b>	<b>文景 A330</b>	<b>USB2.0(GDI)</b>
	<b>文景 A230</b>	<b>USB2.0+并口(GDI)</b>
	<b>文景 A321</b>	<b>USB2.0+并口(GDI)</b>
	<b>文景 A650</b>	<b>USB2.0+并口(GDI)</b>
	<b>文景 C850</b>	<b>USB2.0(GDI)</b>
	<b>文景 A220</b>	<b>IEEE1284 并口, USB</b>
	<b>文景 A230</b>	<b>IEEE-1284 并口 (GDI)</b>

## 惠普

	<b>AR-158/158F/158S</b>	<b>USB 2.0+并口(SPLC)</b>
<b>夏 普</b>	<b>AR-163/163N 打印复印一体</b>	<b>USB 1.1+并口(GDI)</b>
	<b>AR-201/201N 打印复印一体</b>	<b>USB 1.1+并口(GDI)</b>
	<b>AR-206/206N 打印复印一体</b>	<b>USB 1.1+并口(GDI)</b>



	<b>AR-255 打印复印一体</b>	<b>USB 1.1+并口(GDI)</b>
	<b>AR-256L/316L</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-2718N</b>	<b>USB 2.0+并口(GDI)</b>
	<b>AR-2718</b>	<b>USB 2.0+并口(GDI)</b>
	<b>AR-2921</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-2818</b>	<b>USB 1.1+并口(GDI)</b>
	<b>AR-2820N</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-2820</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M160</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M205</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M209</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M236</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M276</b>	<b>USB 2.0+并口(SPLC)</b>
	<b>AR-M420U</b>	并口 (PCL6)
	<b>AR-M310U</b>	并口 (PCL6)

## 理光

	<b>Aficio 1013</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio SP1000S</b>	<b>USB2.0(GDI)</b>
	<b>Aficio SP1000SF</b>	<b>USB2.0(GDI)</b>
	<b>Aficio FX200L</b>	<b>USB+并口(PCL5E/6)</b>
	<b>Aficio GX3000S</b>	<b>USB2.0(GDI)</b>
	<b>Aficio GX3000SF</b>	<b>USB2.0(GDI)</b>
	<b>Aficio CL800</b>	<b>USB1.1(GDI)</b>
	<b>Aficio 1015,1018</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio 551</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio 1035,1045</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio 1022,1037</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio 1115p</b>	<b>USB+并口(PCL5)</b>
	<b>Aficio 1610LD</b>	<b>USB2.0 (DDST)</b>
	<b>Aficio 1810L</b>	<b>USB2.0 (DDST)</b>
	<b>Aficio 1810LD</b>	<b>USB2.0 (DDST)</b>
	<b>Aficio AP600</b>	<b>USB+并口(PCL5E/6)</b>
	<b>Aficio AP600L</b>	<b>USB2.0(PCL6)</b>

## 兄弟

兄弟	<b>DCP 7025</b>	<b>USB+并口(PCL5E/6)</b>
----	-----------------	------------------------

	<b>DCP 7040</b>	<b>USB2.0</b>
	<b>DCP 7030</b>	<b>USB2.0</b>
	<b>DCP 7010</b>	<b>USB+并口(GDI)</b>
	<b>DCP 8060</b>	<b>USB+并口(PCL5E/6)</b>
	<b>HL-1850</b>	<b>USB+并口(PCL5E/6)</b>
	<b>HL-2140</b>	<b>USB2.0 (GDI)</b>
	<b>HL-5240</b>	<b>USB+并口(PCL5E/6)</b>
	<b>HL-2045</b>	<b>USB+并口(GDI)</b>
	<b>HL-2040</b>	<b>USB+并口(GDI)</b>
	<b>HL-6050D</b>	<b>USB+并口(PCL5E/6)</b>
	<b>FAX-2820</b>	<b>USB2.0 (GDI)</b>
	<b>FAX-2920</b>	<b>USB2.0 (GDI)</b>
	<b>MFC 7220</b>	<b>USB+并口(GDI)</b>
	<b>MFC 7420</b>	<b>USB+并口(GDI)</b>
	<b>MFC 7450</b>	<b>USB2.0</b>
	<b>MFC 7340</b>	<b>USB2.0 (GDI)</b>
	<b>MFC 8440</b>	<b>USB+并口(PCL5E/6)</b>
	<b>MFC 8220</b>	<b>USB+并口(GDI)</b>

## OKI

<b>OKI</b>	<b>C3100</b>	<b>USB2.0 (GDI)</b>
	<b>C3100</b>	<b>USB2.0 (GDI)</b>
	<b>C7300</b>	<b>USB2.0</b>
	<b>C9300</b>	<b>USB+并口(PCL5E/6)</b>
	<b>C9500</b>	<b>USB+并口(PCL5E/6)</b>

## 东芝

<b>东芝</b>	<b>e-STUDIO180s</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO200s</b>	<b>USB+并口(GDI)</b>
	<b>e-STUDIO163</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO166</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO167</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO169</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO206</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO207</b>	<b>USB2.0 (GDI)</b>
	<b>e-STUDIO237</b>	<b>USB2.0 (GDI)</b>

## DELL

DELL	2330D	USB+并口(PCL5E/6)
	1720	USB+并口(PCL5E/6)

## 富士通

富士通	FL2100	USB+并口
-----	--------	--------

## 松下

松下	DP-1515P	USB
----	----------	-----